



Thank you for choosing Enermax UC-AEBS PC fan. You can easily adjust the fan speed by tuning the speed regulator with knob. With this function you will get the optimal balance between heat dissipation and noises control according to your system condition. Before you install the fan, please reference this installation guide.

> Note

*Please keep the knobs out of children's reach, in case of accidental swallow.

> Installation

1. Do not turn on PC power during installation.
2. Please connect the fan to PC specific 3-pin 12V header.
3. Airflow direction arrow is on the fan frame. Please refer to your PC case's airflow recommendation to install the fan.
4. Do not insert the stick knob before installation.
5. You can set the speed regulator to the other side to meet different control way or pull it out of case for more convenient use.
6. Speed regulator and stick knob are foolproof. To take out the stick knob, please adjust it to the minimum speed (Turn left)
7. Attach 3-pin connector into fan power source on M/B.Or use the enclosed 3-pin to 4-pin connector to attach the wire to 4-pin connector from power supply.
8. Do not screw on the position of the speed regulator. Otherwise the speed regulator will be damaged.
9. Push out the blade carefully with two hands to clean it up. Do it only when necessary.

